

Controls & Features

To release the parking brake:

Squeeze the rear brake lever/parking brake lever until the P/R lever is released from the slot on the rear brake lever/parking brake lever bracket.

The brake light is activated by applying the brake. When using the parking brake, be sure to turn the ignition switch to OFF (O) to avoid discharging the battery.

To shift the transmission into reverse:

For information on *Riding in Reverse*, see [page 80](#).