

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
		NOTE	HOURS	20	100	200	
	DRIVETRAIN BOOTS				I	I	181
	FRONT and REAR FINAL GEAR OIL (Except TRX420TM1)				(R: EVERY 2 YEARS)	I	131, 134
	REAR FINAL GEAR OIL (TRX420TM1 only)				(R: EVERY 2 YEARS)	I	131
*	2WD/4WD SELECT SYSTEM (Except TRX420TM1)					I	—
*	BRAKE FLUID	NOTE 3			I	I	161
*	BRAKE SHOES WEAR	NOTE 1, 2				I	169
*	BRAKE PADS WEAR	NOTE 1, 2				I	164
*	BRAKE LIGHT SWITCH			I	I	I	170
	BRAKE SYSTEM			I	I	I	161
*	REVERSE LOCK SYSTEM			I	I	I	152
	GUARDS				I	I	179
*	CLUTCH SYSTEM			I	I	I	151
*	SUSPENSION				I	I	158
*	SPARK ARRESTER				C	C	157
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	172
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

** In the interest of safety, we recommend these items be serviced only by your dealer.