


# Tank Cover Assembly Removal

---

LEFT SIDE

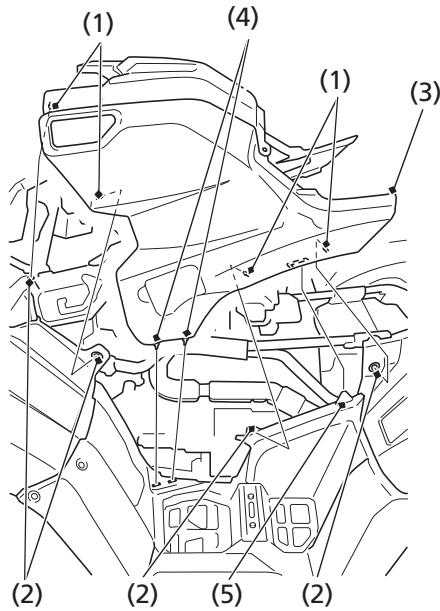

(1) prongs

(2) grommets

(3) tank cover assembly

(4) tabs A

(5) tabs B

## Installation

Install the parts in the reverse order of removal.

Make sure that all prongs and tabs are installed securely in position.