

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

FREQUENCY		WHICHEVER COMES FIRST	INITIAL			REGULAR MAINT. INTERVAL	Refer to page		
			⇨	mi	100			600	1200
				km	150			1000	2000
				MONTH	1			6	12
ITEMS		NOTE	HOURS	20	100	200			
*	FUEL LINE					I	—		
*	THROTTLE OPERATION					I	147		
	AIR CLEANER	NOTE 1			C	C	141		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	146		
	SPARK PLUG				I	I	151		
*	VALVE CLEARANCE				I	I	154		
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R			120		
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			125		
*	ENGINE IDLE SPEED				I	I	—		
	RADIATOR COOLANT	NOTE 3			I	I	134		
*	COOLING SYSTEM	NOTE 2			I	I	—		

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 238).