

# Indicators & Displays

---

## Lamp Check

Initial lamp check:

The indicators come on for a few seconds and then go off when you turn the ignition switch to ON (q).

Except TRX420TM1:

The high coolant temperature indicator and PGM-FI indicator will temporarily come back on for a few seconds and then go off after initial lamp check.

TRX420FM2 only:

The PS (Electric Power Steering) indicator come back on and remains on until the engine is started after initial lamp check.

These indicators are identified in the table on page 17 with the words: *Lamp Check*.

When applicable, the reverse or neutral indicators come back on and remain on until you shift out of reverse or neutral after initial lamp check.

Except TRX420TM1:

If one of these indicators does not come on when it should, have your dealer check for problems.

TRX420TM1 only:

If one of these indicators does not come on when it should, have your dealer check for burned-out bulbs or other problems.