## Fuel

## **Fuel Capacity**

Fuel tank capacity, including reserve: 3.88 US gal (14.7 ℓ) Reserve capacity: 1.29 US gal (4.9 ℓ)

TRX420FM1/FM2:


When there is only one segment left in the fuel gauge (page 25), fuel will be low and you should refuel as soon as possible.

TRX420TM1:

The tank should be refilled as soon as possible when the fuel warning indicator comes on.

## **Refueling Procedure**

Refer to Safety Precautions on page 103.

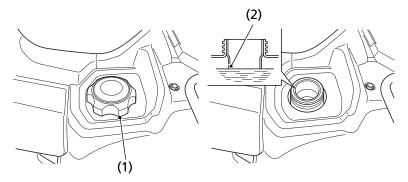

(1) fuel fill cap

(2) bottom of the filler neck

120 Servicing Your Honda