If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but runs poorly.	
POSSIBLE CAUSE	WHAT TO DO
high coolant	Check the coolant
temperature	temperature gauge (Except
	TRX420TM1) and high coolant
	temperature indicator. Refer
	to If the High Coolant
	Temperature Indicator Lights,
	page 213.
runs erratically, misfires	See your dealer.
blubbers (rich fuel	See your dealer.
mixture)	
sooty exhaust (rich fuel	See your dealer.
mixture)	
detonates or pings	If applicable, switch to the
under load	recommended octane gasoline
	(page 119) or change your
	brand of gasoline. If the
	problem persists, see your
	dealer.
afterfires (backfires)	See your dealer.
pre-ignition (runs on	See your dealer.
after ignition switched	
OFF)	

SYMPTOM: Engine starts, but runs poorly or dies when hot.	
POSSIBLE CAUSE	WHAT TO DO
poor or inadequate	See your dealer.
fuel flow due to	(ensure clean fuel supply)
clogged fuel filter	