

# Indicators & Displays

## Oil Change Indicator (TRX420FPM only)



The oil change indicator (1) appears in the display when the mileage or operating hours on your ATV approaches the oil change interval specified on the maintenance schedule.

Reset the indicator after each oil change.

To reset the indicator, press and hold the hourmeter/odometer/tripmeter select button (2) and turn the ignition switch (3) to ON (I) for more than 5 seconds. The indicator message will disappear.

If the oil is changed before the oil change indicator appears, be sure to reset the oil change indicator after changing the oil, except after the initial oil change.

Press and hold the hourmeter/odometer/tripmeter select button and turn the ignition switch to ON (I) for more than 5 seconds. When the indicator lights for 2 seconds and then turns off, the oil change indicator is reset.

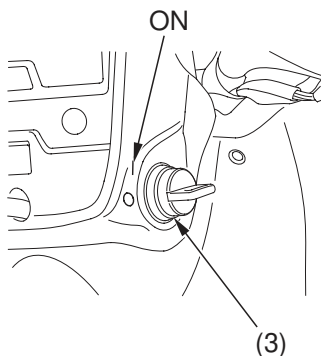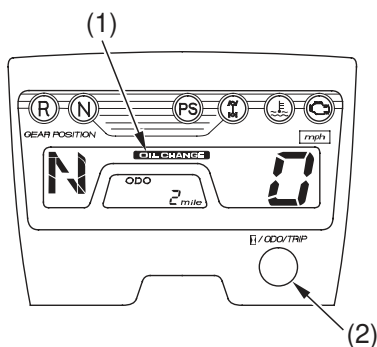

- (1) oil change indicator
- (2) hourmeter/odometer/  
tripmeter select button
- (3) ignition switch

I ON