


# Air Cleaner

## Cleaning

1. Remove the seat (page 100).

### UNDER SEAT

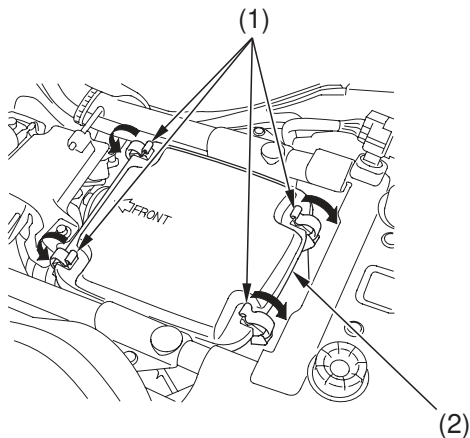

(1) retainer clips

(2) air cleaner housing cover

2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).

(cont'd)