
Clutch System

Clutch Adjustment

Refer to Safety Precautions on page 73.

LEFT HANDLEBAR

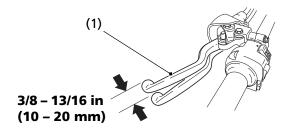

(1) clutch lever/parking brake lever

Clutch adjustment may be required if the ATV stalls when shifting into gear, if it tends to creep, or if the clutch slips, causing acceleration to lag behind engine speed.

Inspection Check freeplay. Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range. Improper freeplay adjustment can cause premature clutch wear.