

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, how to use the throttle and brakes, and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 201](#)).

For information about carburetor adjustment for riding at high altitude, see [page 202](#).

Safe Riding Precautions	40
Off-road Use Only.....	40
Keep Hands and Feet on Controls.....	41
Control Speed	42
Use Care on Unfamiliar or Rough Terrain.....	43
Do Not Perform Stunts.....	44
Starting & Stopping the Engine.....	45
Preparation.....	46
Starting Procedure.....	47
Flooded Engine.....	50
How to Stop the Engine.....	51
Shifting Gears.....	52
Braking.....	54
Riding Your ATV.....	56
Making Turns	56
Skidding or Sliding.....	58
Riding Up Hills	59
Riding Down Hills	63
Crossing or Turning on Hills or Slopes	64
Riding Over Obstacles.....	66
Riding Through Water	67
Parking.....	68