

# Engine Oil & Filter

## Checking & Adding Oil

Refer to *Safety Precautions* on [page 119](#).

Check the engine oil level each day before operating your ATV and add if needed.

The dipstick is located at the front left crankcase cover.

*Before riding your ATV, check the engine oil level.*

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).
3. Stop the engine and wait for 2 – 3 minutes.
4. Remove the oil check lid (1) by disengaging the stud (2) from the grommet (3) and releasing the tabs (4) from the slits.

### LEFT SIDE

