


# Emergency Gear Selection & Operation

---

## How to Shift Gears Manually:

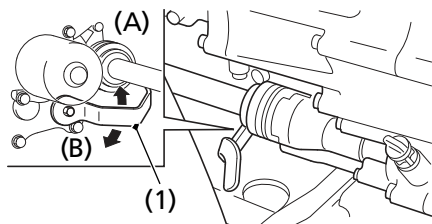

- (1) gear change tool      (A) downshift (counterclockwise)  
(B) upshift (clockwise)

- With the ATV unoccupied, align the hexagonal hole of the gear change tool (1) with the hexagonal end of the secondary spindle which is located on the front crankcase next to the front propeller shaft.
- To downshift, turn the gear change tool to counterclockwise (A). To upshift, turn the gear change tool to clockwise (B).
- If the transmission does not shift, rock the vehicle back and forth and try again.
- Return the gear change tool to the storage location.

Do not attempt to shift gears manually using the gear change tool while riding.

If the transmission is shifted manually when the electric shift system is functioning, the system will shutdown automatically and the shift switches will not operate. To reactivate the system, turn the ignition switch to the OFF (w) position, then turn it back to the ON (q) position.

It may be required to rock the ATV back and forth to get proper transmission gear alignment to allow shifting between gears.