


# If a Fuse Blows

## PS (Electric Power Steering) Fuse Access (TRX500FA6/FA7)

1. Turn the ignition switch to OFF (w) before checking the fuse.
2. Remove the seat (page 130).
3. Remove the rear fender cover (page 131).
4. To access the PS fuse (1), remove the PS fuse box cover (2).  
If the PS fuse is blown, install the spare fuse (page 129).
5. Install the PS fuse box cover.
6. Install the rear fender cover.
7. Install the seat.

### UNDER REAR FENDER COVER

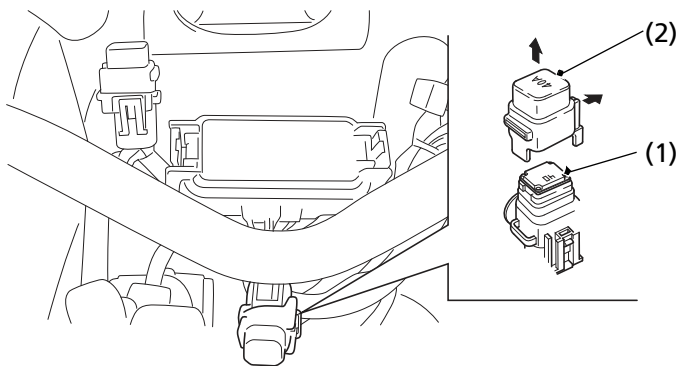

(1) PS fuse

(2) PS fuse box cover