


Indicators & Displays

Speed and Mileage Unit Changing

The speedometer, odometer, tripmeter and maintenance tripmeter show in either “MPH” and “MILE” or “KM/H” and “KM”.


To change the speed and mileage units, press and hold the mode select button (1) for more than 5 seconds in odometer mode (page 28) with the ATV stopped.

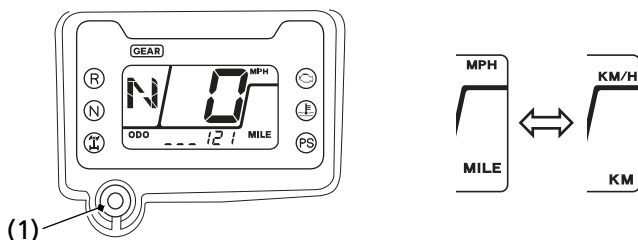

(1) mode select button

4WD Indicator

The 4WD indicator (1) shows when the 4WD mode engages (page 37).

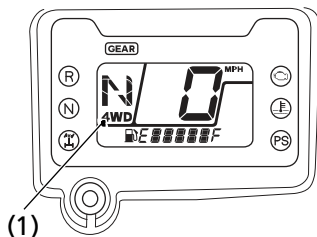

(1) 4WD indicator