

# Shifting Gears

The transmission cannot be upshifted from neutral to 1st gear or D-mode when the engine speed is above 2,300 rpm or the ground speed is above 2 mph (3 km/h).

The transmission cannot be downshifted from 1st gear or D-mode to neutral when the ground speed is above 1 mph (1.5 km/h) or engine speed is above 2,300 rpm.

In ESP (manual shift mode), if the ground speed decreases under a set speed (see table) the transmission will automatically downshift to the next lower gear.

<b>Drive Range (D)</b>		
<b>Gear</b>	<b>Down Shift Speed</b>	
	<b>mph</b>	<b>km / h</b>
<b>5th</b>	<b>6</b>	<b>10</b>
<b>4th</b>	<b>5</b>	<b>8</b>
<b>3rd</b>	<b>3</b>	<b>5</b>
<b>Low Range (L)</b>		
<b>Gear</b>	<b>Down Shift Speed</b>	
	<b>mph</b>	<b>km / h</b>
<b>5th</b>	<b>7</b>	<b>12</b>
<b>4th</b>	<b>6</b>	<b>10</b>
<b>3rd</b>	<b>5</b>	<b>8</b>
<b>2nd</b>	<b>3</b>	<b>5</b>

If the ATV is at a complete stop, 2nd gear, 3rd gear, 4th gear or 5th gear cannot be selected.

If the electric shift system malfunctions, the transmission cannot be shifted by pressing the gearshift switches. See your dealer. (In an emergency, a gear may be selected manually so you may move the vehicle. See *Emergency Gear Selection & Operation*, page 224).