


# Coolant

---

## 8. TRX500FA6/FA7:

Remove the center radiator grill cover by releasing the tab A, tab B, hook A and hook B.

### FRONT (TRX500FA6/FA7)

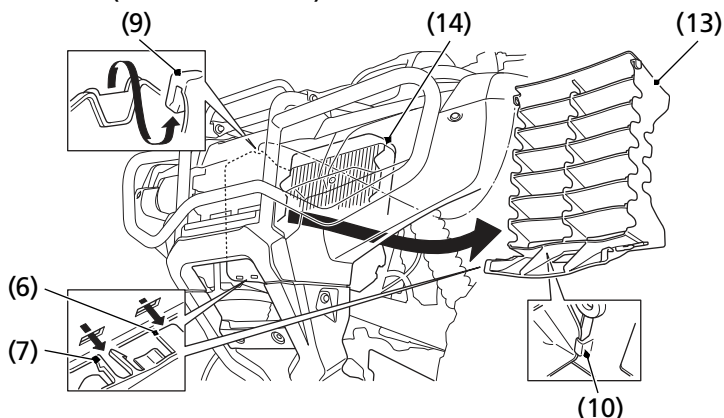

(6) tab A  
(7) tab B  
(9) hook A

(10) hook B  
(13) center radiator grill cover  
(14) radiator core

9. Wash the radiator core (14) and radiator grill covers.

### NOTICE

*Do not apply pressured water directly to the radiator core. The pressured water can damage the radiator core.*

10. Install the removed parts in reverse order of removal.