


# Engine Oil & Filter

---

5. Remove the dipstick (5) from the front left crankcase cover and wipe it clean.
6. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level. The oil level should be between the upper level mark (6) and the lower level mark (7) on the dipstick.

## LEFT SIDE

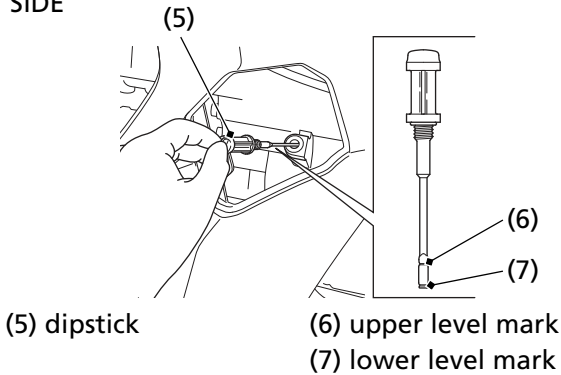

(cont'd)