

# Engine Oil & Filter

---

7. If the oil level is near or below the lower level mark, remove the seat (page 130) and the tank cover assembly (page 132). Remove the engine oil fill cap (8) from the front right crankcase cover and add the specified oil into the fill cap hole, up to the upper level mark on the dipstick.

Do not over fill.

8. Reinstall the engine oil fill cap and dipstick.

9. Install the tank cover assembly.


10. Install the seat.

11. Install the oil check lid.

## NOTICE

*Running the engine with an improper oil level can cause serious engine damage.*

### RIGHT SIDE

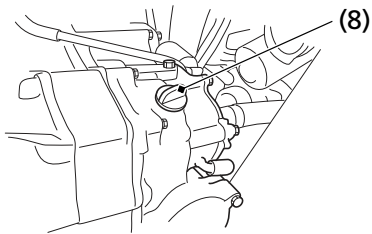

(8) engine oil fill cap