

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			Refer to page	
			REGULAR MAINT. INTERVAL				
			mi	100	600		1200
			km	150	1000		2000
	MONTH	1	6	12			
	NOTE	HOURS	20	100	200		
*	FUEL LINE				I	—	
*	THROTTLE OPERATION				I	165	
	AIR CLEANER	NOTE 1			C	C	159
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	164
	SPARK PLUG				I	I	168
*	VALVE CLEARANCE				I	I	171
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R		137
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		143
*	ENGINE IDLE SPEED				I	I	—
	RADIATOR COOLANT	NOTE 3			I	I	151
*	COOLING SYSTEM	NOTE 2			I	I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 258).