Indicators & Displays

Hourmeter


(For TRX500FA)

The hourmeter (1) shows accumulated hours while the ignition is ON (1). The hourmeter provides accurate service period information for initial and regular maintenance.



(For TRX500FPA)

To change the display from the digital clock to the hourmeter, press and release the digital clock/hourmeter select button (2). The hourmeter mark (3) will appear.

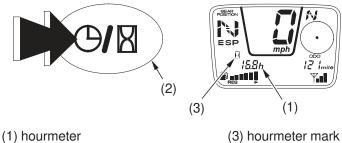

(2) digital clock/hourmeter select button