
The drive mode select switch (3) is located on the right handlebar. To select the drive mode, bring the ATV to a complete stop and turn the drive mode select switch.

The mode will not change if the switch is operated while the vehicle is moving.

**RIGHT HANDLEBAR** 

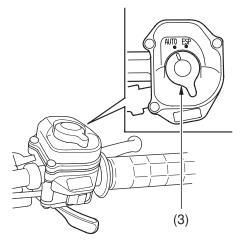

(3) drive mode select switch