

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
		HOURS	20	100	200		
	DRIVETRAIN BOOTS						209
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		163, 165
*	BRAKE FLUID	NOTE 3					190
*	BRAKE SHOES WEAR	NOTE 1					198
*	BRAKE PADS WEAR	NOTE 1, 2					193
*	BRAKELIGHT SWITCH						199
	BRAKE SYSTEM GUARDS						190 208
*	SUSPENSION						187
*	SPARK ARRESTER				C	C	185
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						201
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 270).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.