Indicators & Displays

| 7 | Multi-function | The displace in sheden the fall assists |
|----|----------------------|---|
| / | | The display includes the following |
| | display | functions. Display Check. |
| | Drive mode | Shows the driving mode |
| | indicator | (page 20). |
| | Gear position | Shows the gear position (page 21). |
| | indicator | |
| | Speedometer | Shows riding speed. |
| | Fuel gauge | Shows approximate fuel supply |
| | | available (page 27). |
| | Oil change | Lights when specified maintenance |
| | indicator | interval for engine oil change is |
| | | reached (page 22). |
| | Odometer | Shows accumulated mileage |
| | | (page 23). |
| | Tripmeter | Shows mileage per trip (page 23). |
| | Hourmeter | Shows hours and tenths of hours of |
| | | engine operation (page 24). |
| | Digital clock | Shows the time (hours and minutes) |
| | | (page 25). |
| 8 | Hour select button | Advances the hour displayed by the |
| | | digital clock (page 25). |
| 9 | Minute select button | Advances the minutes displayed by |
| | | the digital clock (page 25). |
| 10 | Adjust button | Used to set the digital clock |
| | 3 | (page 25). |
| 11 | PS (Electric Power | Lights when there is an abnormality |
| | Steering) indicator | in the PS (Electric Power Steering) |
| | (TRX500FPA only) | system. See page 47. Lamp Check. |
| | (11212001171 only) | 5,500m. 500 page 17. Lamp Check. |