


Starting & Stopping the Engine

High Air Temperature 35°C (95°F) or above

LEFT HANDLEBAR

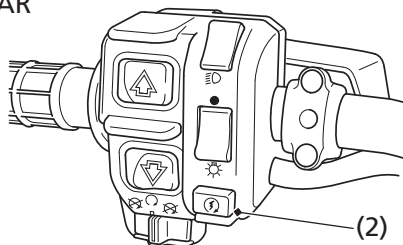

(2) start button

1. Do not use the choke.
2. With the throttle closed, press the start button (2).

Low Air Temperature 10°C (50°F) or below

Follow the procedure for “Normal Air Temperature.”

When air temperature is below -15°C (5°F), push the starting primer knob two or three times ([page 36](#)).

NOTICE

Extended use of the choke may impair piston and cylinder wall lubrication and shorten the life of the engine.

Do not race the engine during the warm-up period.
Racing a cold engine wastes fuel and increases engine wear.

Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.