

# Engine Oil & Filter

---

## Checking & Adding Oil

Refer to *Safety Precautions* on [page 111](#).


Check the engine oil level each day before operating your ATV and add if needed.

The oil fill cap/dipstick is located at the front left crankcase.

*Before riding your ATV, check the engine oil level.*

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).
3. Stop the engine and wait 2 – 3 minutes.
4. Remove the oil check/fill door (1) by disengaging the studs (2) from the grommets and releasing the tabs (3) from the slits.

### LEFT SIDE

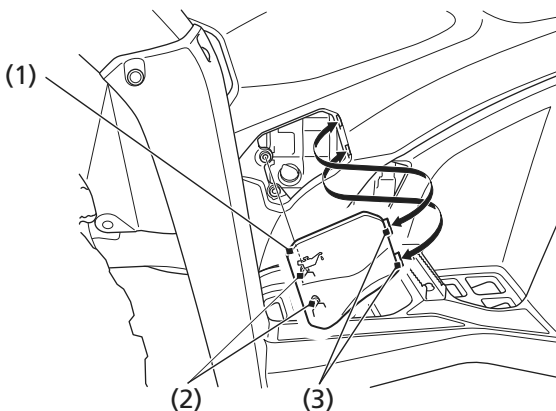

- (1) oil check/fill door      (3) tabs  
(2) studs