

Indicators & Displays

| | | |
|----|---|---|
| 7 | Multi-function display | The display includes the following functions. <i>Display Check</i> . |
| | Gear position indicator | Shows the gear position (page 19). |
| | Speedometer | Shows riding speed. |
| | Fuel gauge | Shows approximate fuel supply available (page 26). |
| | Oil change indicator | Lights when specified maintenance interval for engine oil change is reached (page 20). |
| | Odometer | Shows accumulated mileage (page 21). |
| | Tripmeter | Shows mileage per trip (page 21). |
| | Hourmeter | Shows hours and tenths of hours of engine operation (page 23). |
| | Digital clock | Shows the time (hours and minutes) (page 24). |
| 8 | Hour select button | Advances the hour displayed by the digital clock (page 24). |
| 9 | Minute select button | Advances the minutes displayed by the digital clock (page 24). |
| 10 | Adjust button | Used to set the digital clock (page 24). |
| 11 | PS (Electric Power Steering) indicator (TRX500FPE only) | Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 45 . <i>Lamp Check</i> . |