

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			km	150	1000	2000	
			mi	100	600	1200	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS						165
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R.EVERY 2 YEARS)		123, 125
*	BRAKE FLUID	NOTE 3					145
*	BRAKE SHOES WEAR	NOTE 1					154
*	BRAKE PADS WEAR	NOTE 1,2					148
*	BRAKELIGHT SWITCH						155
	BRAKE SYSTEM						145
*	REVERSE LOCK SYSTEM						137
	GUARDS						164
*	CLUTCH SYSTEM						136
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	143
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						157
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.