

Indicators & Displays

Reset the maintenance tripmeter/maintenance hour meter after maintenances.

To reset the maintenance tripmeter/maintenance hour meter, proceed as follows:

Press and hold the mode select button (5) and turn the ignition switch (6) to ON (I). The maintenance minder indicator will appear, then it will blink twice, and the multi-function display will temporarily show all the modes and digital segments. The indicator message will disappear.

Reset operation will be canceled, if the mode select button is released before the indicator blinks twice.

If the maintenance is done before the setting interval, be sure to reset the meters after the maintenance.

