

# Index

---

operation component locations .....	11
owner's manual storage .....	119
oxygenated fuels .....	238

## P

parking .....	103
parking brake/reverse lever (P/R lever) .....	45
passengers, no carrying .....	59
pavement, no riding on .....	73
pinging, engine .....	124
plug, spark .....	158
pre-ride inspection .....	61
problems, unexpected .....	204
propeller shaft boots & yoke joint boot .....	182
protective apparel .....	56
PS (Electric Power Steering) (TRX500FM6/FM7) .....	54

## R

rear driveshaft boots .....	182
rear driveshaft guards .....	181
rear fender cover removal .....	121
rear final gear oil .....	136
recoil starter (Canada only) .....	42, 83
removal,	
rear fender cover .....	121
seat .....	120
tank cover assembly .....	122
reverse,	
assist cable .....	157
assist lever .....	157
gear, shifting into .....	86
indicator .....	14, 17
riding in .....	86