


# Controls & Features

## Headlight Switch

y t

### LEFT HANDLEBAR

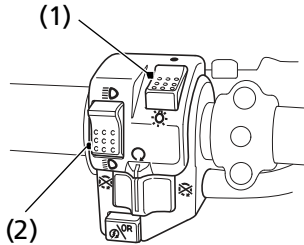

- |                             |       |
|-----------------------------|-------|
| (1) headlight switch        | y ON  |
|                             | t OFF |
| (2) headlight dimmer switch | u HI  |
|                             | i LO  |

The headlight switch (1) is used to turn the headlights and assist headlight ON (y ) or OFF (t). The assist headlight turns on only when the dimmer switch (2) is in the HI (u ) position. To operate, turn the switch to ON (y ) or OFF (t).

## Headlight Dimmer Switch

u i

The headlight dimmer switch (2) is used to change between the high and low beams of the headlights and to activate the assist headlight. To operate, turn the switch to HI (u ) for high beam of the headlights and activate the assist headlight, LO (i ) for low beam of the headlights and deactivate the assist headlight.