


# Air Cleaner

## Cleaning

1. Remove the seat (page 120).

### UNDER SEAT

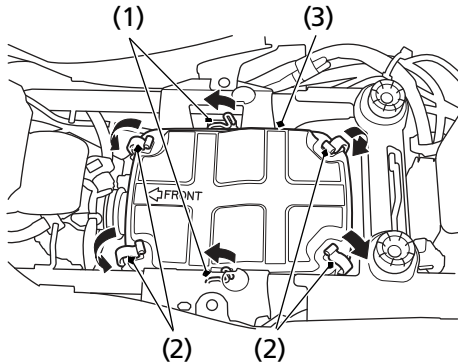

(1) spring hooks  
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the spring hooks (1) and retainer clips (2).
3. Remove the air cleaner housing cover (3).

(cont'd)