

Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 111.


Check the engine oil level each day before operating your ATV and add if needed.

The oil fill cap/dipstick is located at the front left crankcase.

Before riding your ATV, check the engine oil level.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).
3. Stop the engine and wait 2 – 3 minutes.
4. Remove the oil check/fill door (1) by disengaging the stud (2) from the grommet and releasing the tabs (3) from the slits.

LEFT SIDE

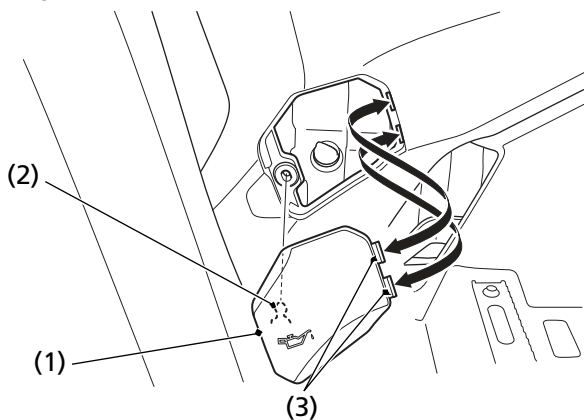

(1) oil check/fill door

(2) stud

(3) tabs