

Indicators & Displays

8	Hour select button	Advances the hour displayed by the digital clock (page 26).
	Plus button (TRX680 FGA)	Advances the latitude and longitude when in the GPS mode. This button also used to set the digital clock (page 27).
9	Minute select button	Advances the minutes displayed by the digital clock (page 26).
	Minus button (TRX680 FGA)	Advances the latitude and longitude when in the GPS mode. This button also used to set the digital clock (page 27).
10	ADJ button	Used to set the digital clock (page 26).
	GPS/WP button (TRX680 FGA)	This button is used to select the GPS navigation mode and input a waypoint or to erase waypoint data.
11	PGM-FI indicator	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and use the start button. If the indicator comes on at any other time, reduce speed and take your vehicle to a Honda dealer as soon as possible. <i>Lamp Check.</i>