


Indicators & Displays

(For TRX680FGA)

1. Turn the ignition switch ON (1).
 - To change the display from hourmeter to digital clock, press and release the digital clock/hourmeter select button (1).
2. Press and hold the digital clock/hourmeter select button for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.
3. To advance the hour display one unit at a time, press and release the plus button (2) or minus button (3).
To advance the hour display automatically, press and hold the plus button or minus button. After 2 seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.

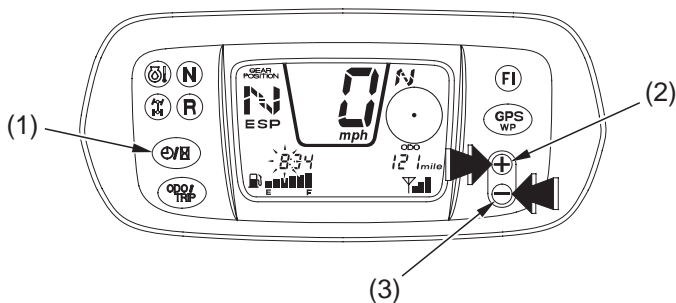

- (1) digital clock/hourmeter
select button
- (2) plus button

- (3) minus button

(cont'd)