

# Shifting Gears


---

## AUTO Mode

When the drive mode is at AUTO, shifting the lever to “D” (drive) provides a 3-speed automatic transmission.

1. While pulling up the shift lever ( 1 ), shift to “D.”
2. Pull down the shift lever and confirm that the lever is locked and the gear position indicator ( 3 ) is showing “D.”

Shifting to “N” (neutral) or “R” (reverse) is in the same manner as above. For reverse, refer to the *Riding In Reverse* (page 108).

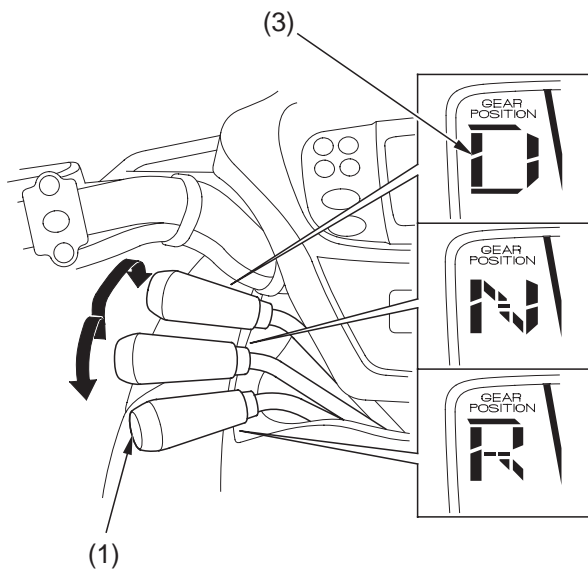

(1) shift lever

(3) gear position indicator