

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST  ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS			I	I	160	
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R: EVERY 2 YEARS)	I	122 124	
*	BRAKE FLUID	NOTE 3		I	I	144	
*	BRAKE PADS WEAR	NOTE 1, 2			I	147	
*	BRAKE LIGHT SWITCH		I	I	I	151	
	BRAKE SYSTEM		I	I	I	144	
	GUARDS			I	I	159	
*	SUSPENSION			I	I	—	
*	SPARK ARRESTER			C	C	142	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	—	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 218).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.