


# Maintenance Component Locations

---

rear brake  
lever/parking  
brake lever

front brake fluid reservoir

front brake lever

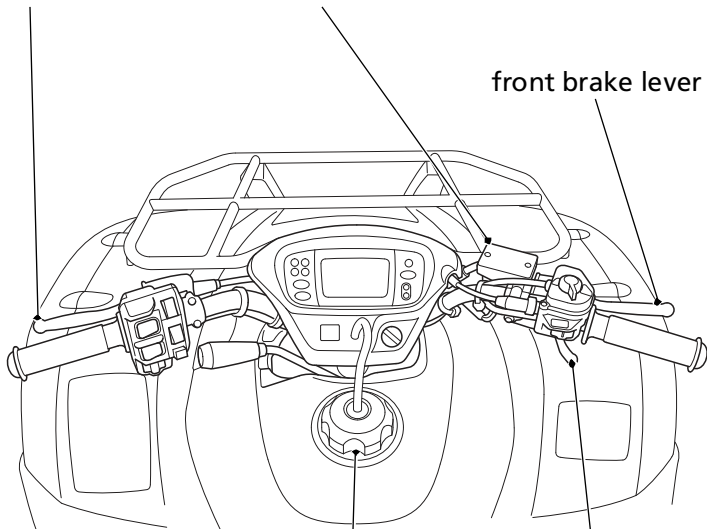

fuel fill cap

throttle lever