


# Spark Plugs

- Remove the oil fill cap lid (page 120).
- Remove the bolts A (6), collars (7), bolts B (8) and left engine side cover (9).


LEFT SIDE

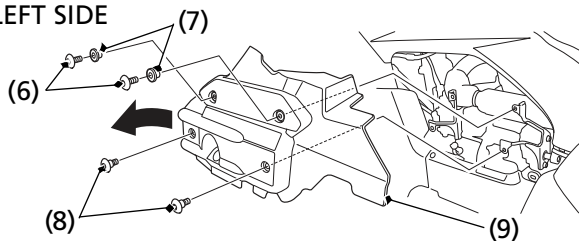


(6) bolts A  
(7) collars

(8) bolts B  
(9) left engine side cover

- Clean any dirt from around the spark plug bases.
- Disconnect the top spark plug cap (10) and side spark plug cap (11). Take care to avoid damaging the spark plug wires when disconnecting the caps.
- Using a spark plug wrench provided in the tool kit, remove the spark plugs.

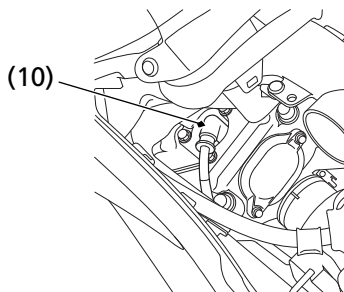

(10) top spark plug cap

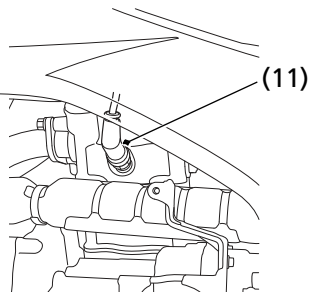

(11) side spark plug cap

(cont'd)