

# Starting & Stopping the Engine

---

## Stalled Engine

If the engine stalls, shift into neutral (N) and restart the engine.

If you are unable to shift to neutral (N) from drive (D), you can restart the engine by squeezing the front brake lever and pressing the start button while the vehicle is stopped.

Do not press the throttle lever while starting in gear. Your ATV is equipped with a start inhibitor system that will cut off the ignition if the throttle is open while attempting to start in gear.

Once you have started the engine, release the front brake lever, then apply throttle gradually.