

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page
			mi	100	600	1200	Refer to page		
			km	150	1000	2000			
			MONTH	1	6	12			
NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—	
*	THROTTLE OPERATION					I		138	
	AIR CLEANER	NOTE 1				C	C	133	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	137	
	SPARK PLUG					I	I	140	
*	VALVE CLEARANCE				I	I	I	144	
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R				116	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R				121	
*	ENGINE IDLE SPEED				I	I	I	—	
	RADIATOR COOLANT	NOTE 3				I	I	128	
*	COOLING SYSTEM	NOTE 2				I	I	—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).