

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		mi	km	100	600	1200	
		⇔	km	150	1000	2000	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		109
AIR CLEANER		NOTE 1			C	C	105
SPARK PLUG					I	I	113
* VALVE CLEARANCE				I	I	I	116
ENGINE OIL				INITIAL=100 mi (150 km), 20 operating hours or 1 month: R REGULAR=Every 600 mi (1,000 km), 100 operating hours or 12 months: R			99
** ENGINE OIL STRAINER SCREEN						C	—
** ENGINE OIL CENTRIFUGAL FILTER						C	—
* ENGINE IDLE SPEED				I	I	I	112
* SECONDARY AIR SUPPLY SYSTEM						I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

** In the interest of safety, we recommend these items be serviced only by your dealer.