


# Air Cleaner

---

## Cleaning

1. Remove the seat by pulling the seat lock lever ( 1 ) up.

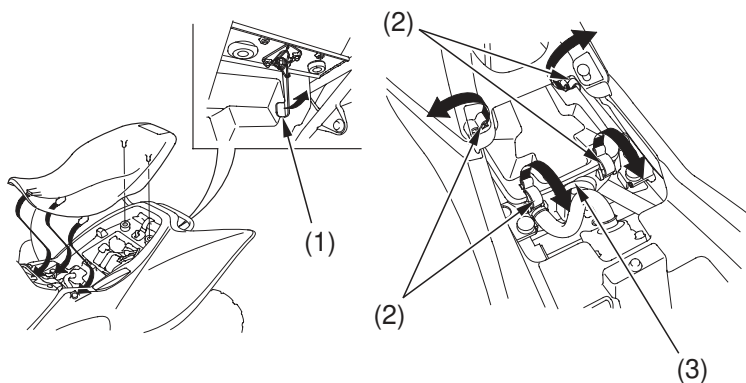

(1) seat lock lever  
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the four retainer clips ( 2 ).
3. Remove the air cleaner housing cover ( 3 ).
4. Remove the set plate ( 4 ) and remove the air cleaner assembly ( 5 ) from the case.