


Skid Plates

Skid Plate & Engine Guard

Refer to *Safety Precautions* on [page 84](#).

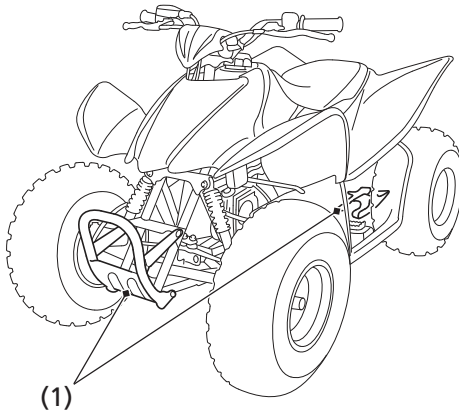

(1) skid plates

The skid plates (1) protect the frame/lower arm, the drive components and the rear brake. Check the plates for cracks, damage or looseness at intervals shown in the Maintenance Schedule.

Have the skid plates replaced if they are cracked or damaged. If the plate bolts are loose, tighten them securely.