

# If You Have a Flat Tire

---

## Installation

1. Position the wheel.
2. Position the wheel nuts.
3. Hand-tighten the wheel nuts on the wheel, then lower the ATV to the ground before tightening the nuts in a crisscross (rather than circular) pattern to the specified torque:  
**40 lbf·ft (54 N·m, 5.5 kgf·m)**

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.