


# Maintenance Component Locations

---

rear brake lever/parking brake lever

front brake lever

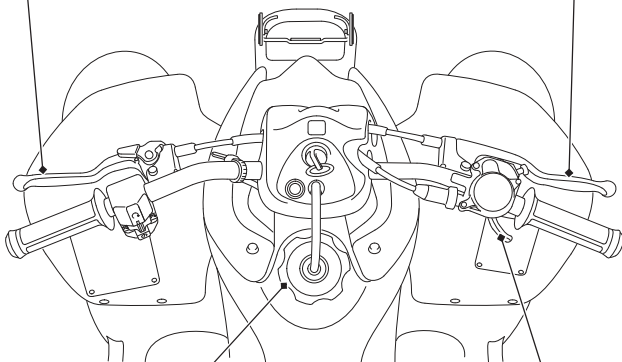

fuel fill cap

throttle lever