


Battery

The battery is located in a compartment under the seat.

UNDER SEAT

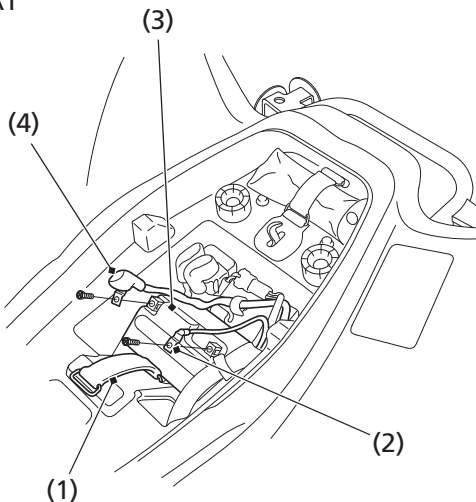

(1) rubber band

(2) negative (-) terminal

(3) battery

(4) positive (+) terminal

Removal

1. Make sure the ignition switch is OFF (w).
2. Remove the seat (page 95).
3. Release the rings and remove the rubber band (1).
4. Disconnect the negative (-) terminal (2) from the battery (3) first, then disconnect the positive (+) terminal (4).
5. Remove the battery.