


Engine Oil ► Changing Engine Oil & Filter

- Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
 - Discard the oil and oil filter at an approved recycling center.

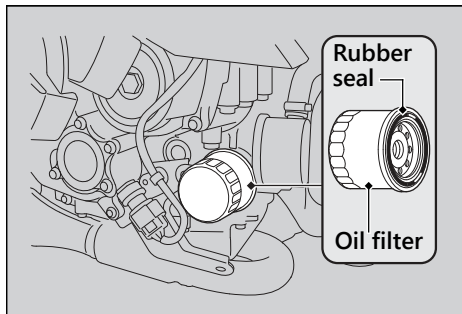

- Apply a thin coat of engine oil to the rubber seal of a new oil filter.

- Install the new oil filter and tighten.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf-m)

- Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 21 lbf-ft (29 N·m, 3.0 kgf-m)