

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 107	<b>Tire Puncture</b> .....	P. 114
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 108	<b>Electrical Trouble</b> .....	P. 121
<b>Warning Indicators On or Flashing</b> .....	P. 109	Battery Goes Dead.....	P. 121
Low Oil Pressure Indicator .....	P. 109	Burned-out Light Bulb .....	P. 121
PGM-FI (Programmed Fuel Injection)		Blown Fuse .....	P. 125
Malfunction Indicator Lamp (MIL).....	P. 109		
ABS (Anti-lock Brake System) Indicator .....	P. 110		
Torque Control Indicator.....	P. 111		
<b>If the “-” Indicator is Blinking in the Gear Position Window While Riding</b> .....	P. 112		
<b>Other Warning Indications</b> .....	P. 113		
Fuel Gauge Failure Indication.....	P. 113		
Handle Grip Heater Failure Indication .....	P. 113		