


Side Cover Removal

Refer to *Safety Precautions* on page 62 .

The right side cover (1) must be removed to service the circuit fuses, suspension adjustment or to access the owner's manual.

RIGHT SIDE

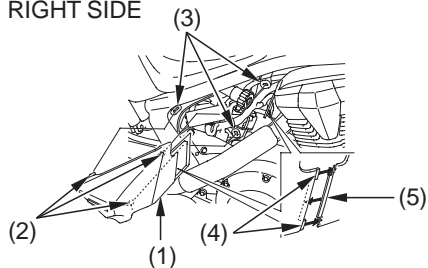

- | | |
|----------------------|---------------------------|
| (1) right side cover | (4) right side cover tabs |
| (2) prongs | |
| (3) frame grommets | (5) left side cover tab |

Right Side Cover Removal

1. Carefully pull the right side cover out until the prongs (2) are clear of the frame grommets (3).
2. Remove the right side cover.

Right Side Cover Installation

1. Align the right side cover tabs (4) with the left side cover tab (5).
2. Position the right side cover so the prongs are aligned with the frame grommets.
3. Push the prongs in.